


Installation guide

Assembly

- 01** Prepare working area (line assembly area with cardboard and place barrier stanchions and rails nearby)
- 02** Place two rails parallel on cardboard (floor) 300mm apart with nutserts facing up
- 03** Lay stanchions over rails and align holes with nutserts
- 04** Insert all m8 bolts with washers and ensure stanchion is visibly square to the rails before tightening.
- 05** Tighten with impact wrench (Do NOT over tighten)
- 06** Stand barrier up, move aside and repeat process.

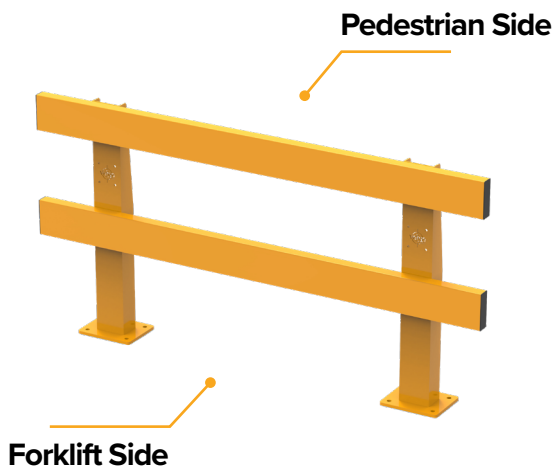

Installation

- 01** Flick string lines along floor where barriers are required
- 02** Put barriers in place ensuring you have even gaps between each barrier, and the rails are on the forklift side of the barrier. (See image on the left)
- 03** Mark holes with texter move barrier and drill holes 100mm deep
- 04** Knock in plastic end cap
- 05** Remove dust, place spacer in of drilled area
- 06** Put barriers in place, insert m16 through bolts and knock in
- 07** Level and tighten