




Verge Eco Kit Setout instructions

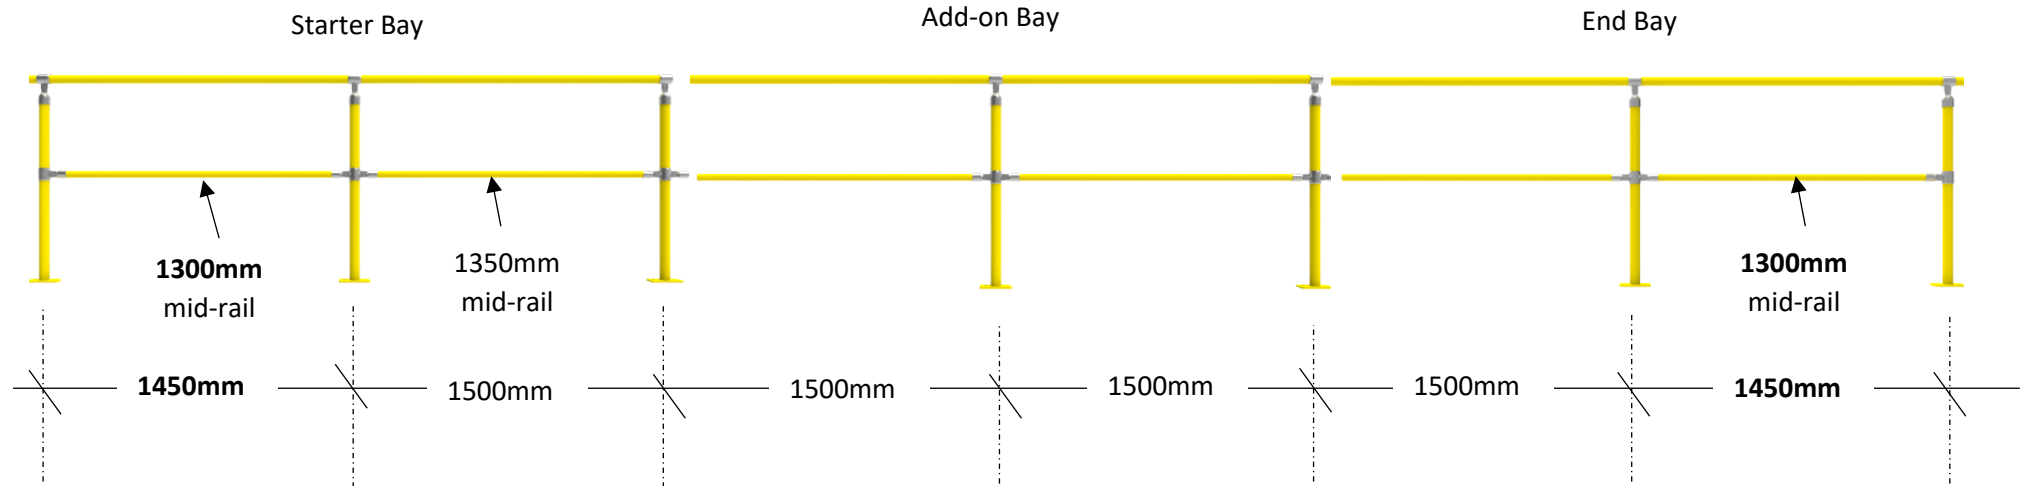

1. Mark out the area where the barrier is to be installed, and by using a chalk line mark a straight line to edge of base plate position
2. Mark out the post / stanchion centres starting with a **1450mm for the first bay only** and 1500mm centres for each bay after, until the last bay, make it 1450mm or less (depending on the length required).
3. Drill the concrete using a 12mm masonry bit and fix down the stanchions with fixings provided ensuring that they are plumb.
4. Fit all the mid-rails by removing the cup from the stanchion on one side only and refix when the mid-rail has been inserted. (*remembering that the mid-rail for first bay is 1300mm long*)
5. Fit top rail by sliding the top Tee fittings loosely over the top rail plate in position on top of stanchions. Tighten all fittings and grub screws
6. Fit knock in end caps to finish off.