


## Setout Instructions

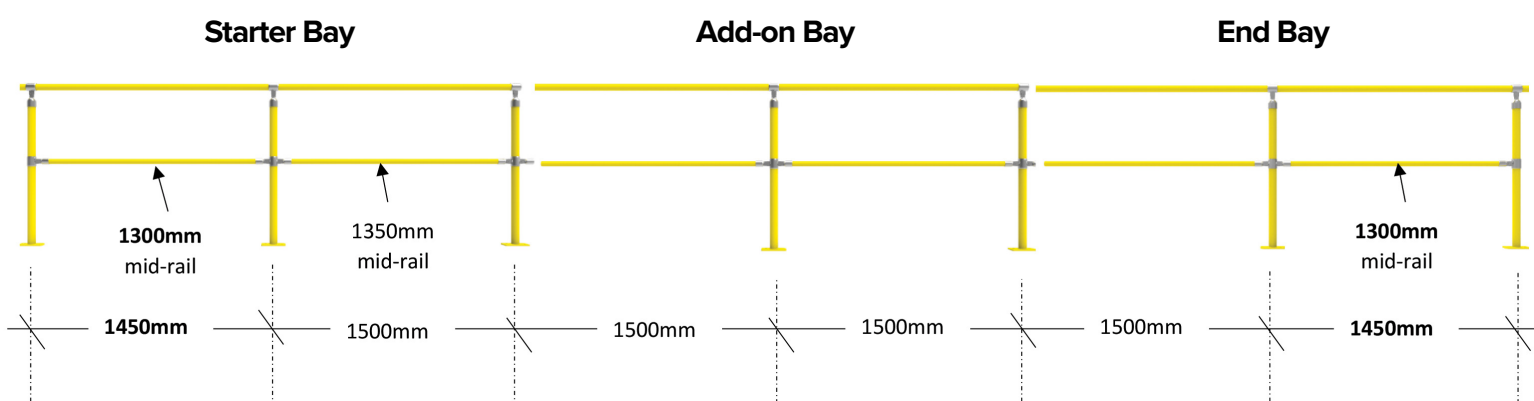

- 01** Mark out the area where the barrier is to be installed, and by using a chalk line mark a straight line to edge of base plate position
- 02** Mark out the post / stanchion centres starting with a 1450mm for the first bay only and 1500mm centres for each bay after, until the last bay, make it 1450mm or less (depending on the length required).
- 03** Drill the concrete using a 12mm masonry bit and fix down the stanchions with fixings provided ensuring that they are plumb.
- 04** Fit all the mid-rails by removing the cup from the stanchion on one side only and re-fix when the mid-rail has been inserted. (remembering that the mid-rail for first bay is 1300mm long)
- 05** Fit top rail by sliding the top Tee fittings loosely over the top rail place in position on top of stanchions. Tighten all fittings and grub screws
- 06** Fit knock in end caps to finish off.